
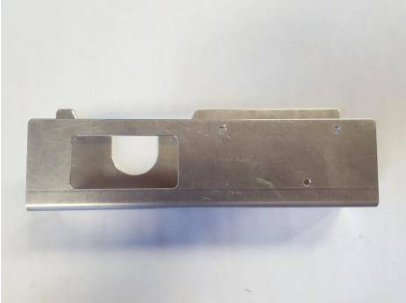


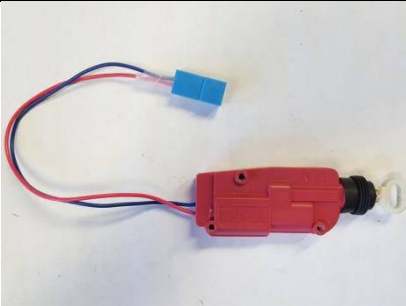

INSTALLATION GUIDE

ERGO ALUMINIUM CENTRAL LOCKING KIT

CONTENTS:

QTY	Description	Image
1	Eberhard Ergo Handle	
2	Keys	
4	Nylock	

1	Aluminium Bracket	
1	Actuator RADN	
1	CP-ADAPTER PIN HAIR-4	
3	Self tapping screw	


STEP 1

Install the Eberhard Ergo Handle to the surface of the panel by securing the top 2 mounting holes with the nylocks




STEP 2

Attach the CP-Adapter Pin to the Lock Cam, fixing with the HAIR-4 clip. Place the "D" nose of the Actuator over the Pin

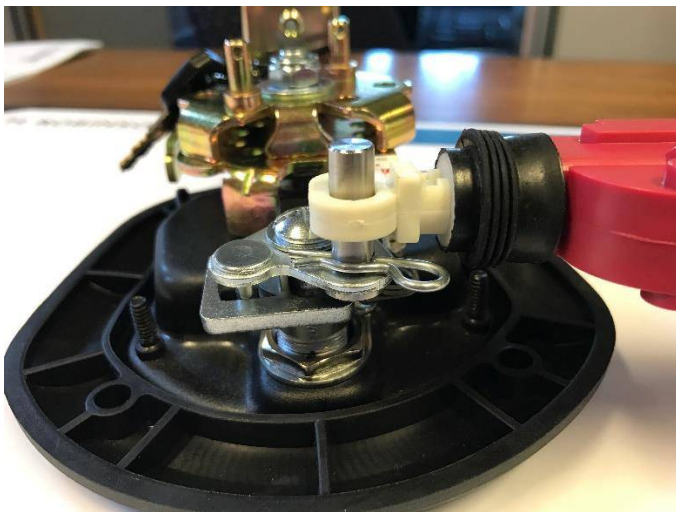

STEP 3

Insert the aluminium bracket over the bottom 2 mounting and secure with the remaining 2 nylocks.

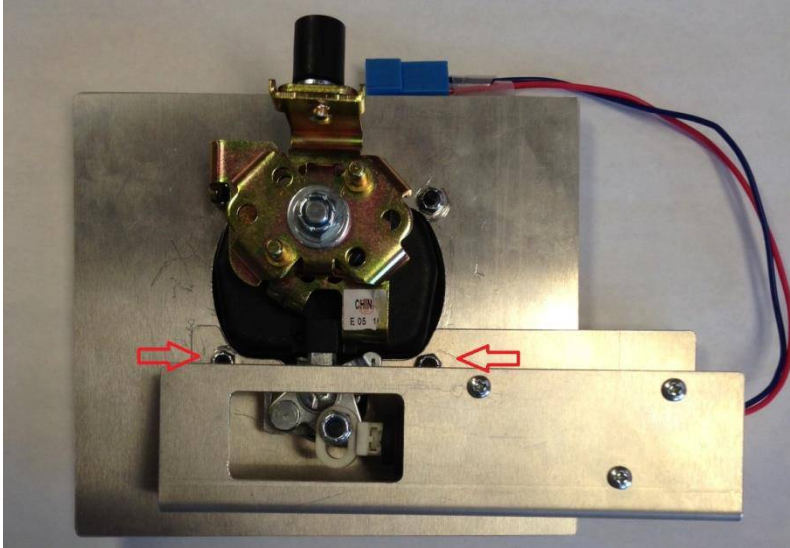

STEP 4

Secure the RADN actuator to the aluminium bracket with the self tapping screws

