

## PK Lock Cores

### *SOUTHCO*® Key-Choice System

- Lock cores ordered separately
- Greater flexibility in locking requirements

#### Material and Finish

Zinc alloy, chrome plated, black powder coated or with a stainless steel scalp



Key-Choice System

This icon indicates that a product is compatible with the *SOUTHCO*® Key-Choice System



For other lock core styles visit [www.southco.com](http://www.southco.com)

For additional details on the *SOUTHCO*® Key-Choice System go to [www.security.southco.com](http://www.security.southco.com)

















The *SOUTHCO*® Key-Choice System features a common lock core that fits a wide range of *SOUTHCO*® latches.

This system allows for the independent selection of the correct latch for your application and the lock core required to manage the security of the end product. The guide below shows each of the latches in the *SOUTHCO*® Key-Choice System that can be purchased without the lock core installed.

Lock cores are sold separately which provides:

- The option to configure multiple latch styles with the same keying option
- The ability to configure the same latch style with multiple keying options
- Inventory reduction by managing multiple keying options with the lock core, while latches remain without the core installed until keying assignment is desired

#### Latches in the *SOUTHCO*® Key-Choice System

   			
Compression	Cam	Push-to-close	Locks
 62 Lift and Turn Latch page 97	 E5 Wing Style Latch page 126	 R3-20 Baggage Door Latch page 238	 CM-3 Sealed page 164
 C2 Lever Latch page 106	 E5 T-Handle Latch page 125	 AC-10 Actuator page 264	 CM-6 Non-sealed page 164
 C5 Sealed Lever Latch page 104	 E5 L-Handle Latch page 124	 AC-15 Actuator page 265	
	 E5 Flush Cup Wing Style page 122		

Other options available. For complete details on variety, part numbers, installation and specification, go to




[www.southco.com/PK](http://www.southco.com/PK)

Dimensions in millimeters (inch) unless otherwise stated

**southco**  
CONNECT · CREATE · INNOVATE

# PK Lock Cores

## SOUTHCO® Key-Choice System

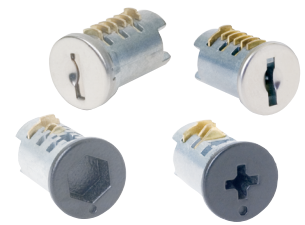

159

### Lock Cores - Disc Tumbler

Lock Core Part Number						
Keying	Key code	Bag qty	Shuttered stainless steel scalp	Non shuttered stainless steel scalp	Non shuttered black powder coated	Non shuttered chrome plated
KA	CH751	1	PK-39-72-13-KCH751	PK-132-13	PK-115-13	PK-116-13
KA	RS001	1	PK-39-72-13-RS001	PK-132-13-RS001	PK-29-15-13-RS001	PK-29-16-13-RS001
KD	10 CODES	10	PK-39-72-13-KD1010	PK-132-13-KD1010	PK-29-15-13-KD1010	PK-29-16-13-KD1010
KD	50 CODES	50	PK-39-72-13-KD1050	PK-132-13-KD1050	PK-29-15-13-KD1050	PK-29-16-13-KD1050
KD	125 CODES	125	PK-39-72-13-KD1125	PK-132-13-KD1125	PK-29-15-13-KD1125	PK-29-16-13-KD1125
MKKD	10 CODES	10	PK-39-72-13-MK1010	PK-132-13-MK1010	PK-29-15-13-MK1010	PK-29-16-13-MK1010
MKKD	50 CODES	50	PK-39-72-13-MK1050	PK-132-13-MK1050	PK-29-15-13-MK1050	PK-29-16-13-MK1050
MKKD	125 CODES	125	PK-39-72-13-MK1125	PK-132-13-MK1125	PK-29-15-13-MK1125	PK-29-16-13-MK1125

Keys	Part Number
Master Key (1)	PK-24-01
Control (Removal) Key (1)	PK-11-03

Keys	Part Number
CH751	PK-10-01
RS001	PK-10-01-RS001

### Key code selection

**KA** - Keyed Alike:

All lock cores are the same key code

**KD** - Keyed Differently:

Multiple key codes provided in a non-master key system

**MKKD** - Master Keyed, Keyed Differently:

Multiple key codes provided in a master key system


### Notes

Part Number includes 1 lock core and 2 keys

### Lock Cores - Tool Operable

Head Style	Lock Core Part Number			
	Phillips recess	Slotted	4 mm Hex recess	8 mm Hex recess
Chrome plated	PK-0-34027-01	PK-0-43489-01	PK-0-34323-01	PK-0-40374-01
Black powder coated	PK-0-34027-50	PK-0-43489-50	PK-0-34323-50	PK-0-40374-50

### Lock Core Installation for CM-3 and CM-6 only (see page 164)

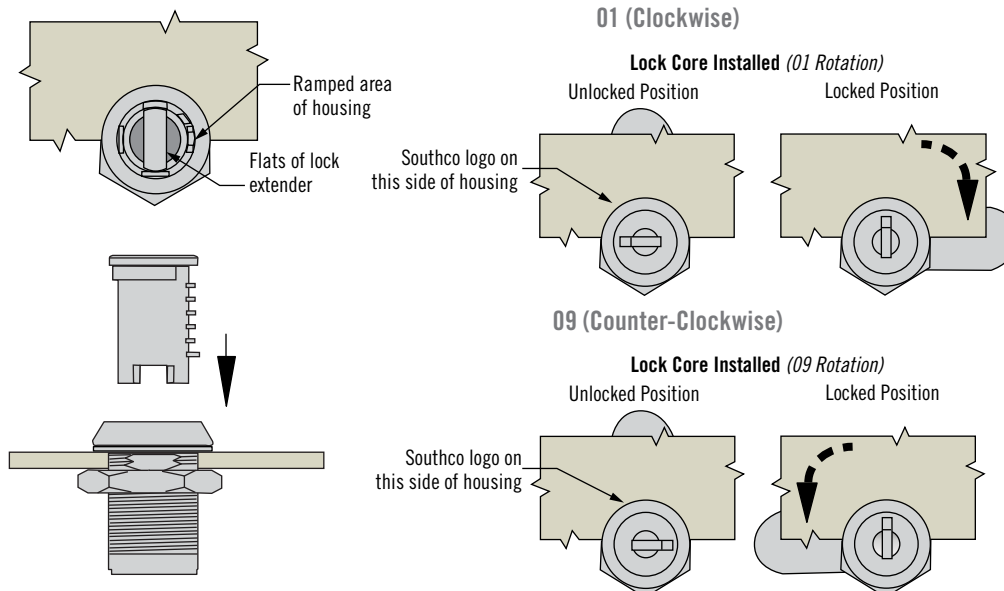

### Installation Notes

1. Prepare panel and install latches shown on page 167.
2. Latch should be in unlatched position. The flats of the lock extender should be aligned with the flats on the housing.
3. Take a lock core and orient the brass wafers to the internal ramped area of the housing. Push lock core into housing until it stops.
4. Insert key into lock core and turn to verify lock core is fully seated and operating properly.
5. Install cam.

Other options available. For complete details on variety, part numbers, installation and specification, go to



[www.southco.com/PK](http://www.southco.com/PK)